

COPYRIGHT © Hangzhou EZVIZ Software Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou EZVIZ Software Co., Ltd. (hereinafter referred to as “EZVIZ”). This user manual (hereinafter referred to as “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.


### **About this Manual**

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the EZVIZ™ website (<http://www.ezviz.com>).

### **Revision Record**

New release – March, 2026

### **Trademarks Acknowledgement**

EZVIZ™, ™, and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

### **Legal Disclaimer**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT.

EZVIZ DOES NOT UNDERTAKE ANY LIABILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE AS THE RESULT OF PRODUCT INTERRUPTION OR SERVICE TERMINATION CAUSED BY: A) IMPROPER INSTALLATION OR USAGE OTHER THAN AS REQUESTED; B) THE PROTECTION OF NATIONAL OR PUBLIC INTERESTS; C) FORCE MAJEURE; D) YOURSELF OR THE THIRD PARTY, INCLUDING WITHOUT LIMITATION, USING ANY THIRD PARTY'S PRODUCTS, SOFTWARE, APPLICATIONS, AND AMONG OTHERS.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS AND DATA PROTECTION LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATTER PREVAILS.

# Table of Contents

|   |           |
|---|-----------|
| <b>Overview</b> .....                           | <b>1</b>  |
| 1. Package Contents .....                       | 1         |
| 2. Basics .....                                 | 2         |
| <b>Get the EZVIZ App</b> .....                  | <b>3</b>  |
| <b>Basic Wiring Diagram</b> .....               | <b>3</b>  |
| <b>Add Device</b> .....                         | <b>4</b>  |
| 1. Add Wi-Fi Relay .....                        | 4         |
| 2. Set Up Matter .....                          | 4         |
| <b>Device Installation</b> .....                | <b>5</b>  |
| 1. Cut the Power Off .....                      | 5         |
| 2. Connect the Cables .....                     | 6         |
| 3. Install the Device .....                     | 7         |
| <b>Operations on the EZVIZ App</b> .....        | <b>8</b>  |
| 1. Device Page .....                            | 8         |
| 2. Switch Page .....                            | 9         |
| <b>EZVIZ Connect</b> .....                      | <b>10</b> |
| 1. Use Amazon Alexa .....                       | 10        |
| 2. Use Google Assistant .....                   | 11        |
| <b>Specification</b> .....                      | <b>12</b> |
| <b>Information for Private Households</b> ..... | <b>13</b> |

 
## Overview

T35 Wi-Fi Relay is a small form factor smart switch, which allows remote control of electric appliances via mobile phone, tablet, PC, or home automation system. It can work standalone in a local Wi-Fi network or it can also be operated through cloud home automation services.

It can be accessed, controlled and monitored remotely from anywhere with internet access, as long as the device is connected to a Wi-Fi router.

It can be retrofitted into standard electrical wall boxes, behind power buttons and light switches or other places with limited space.

### 1. Package Contents

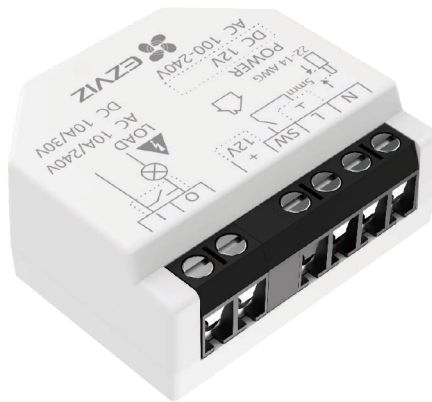

Wi-Fi Relay (x1)



Pin (x1)



Matter Setup Instruction (x1)




Regulatory Information (x2)




Quick Start Guide (x1)

## 2. Basics

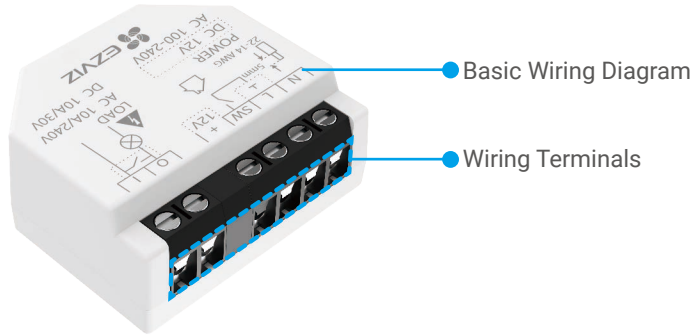 

Front View

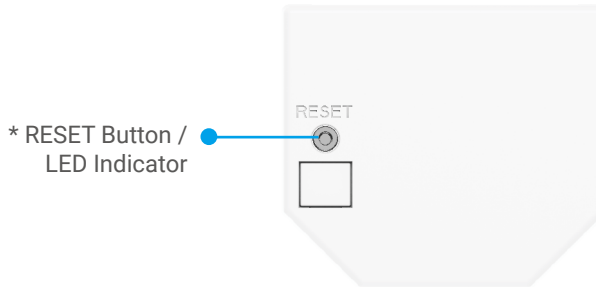 

Back View

### \* LED Indicator

- Solid blue: The device is connected to the Wi-Fi network.
- • Slow-flashing blue: The device is disconnected from the Wi-Fi network.
- Fast-flashing blue: The device is ready for Wi-Fi configuration.

### \* RESET Button

#### Change Wi-Fi:

Use the pin to press and hold the RESET button for 4 seconds, the indicator becomes fast-flashing blue, indicating that the device is ready for Wi-Fi configuration.

- The Wi-Fi configuration mode lasts for 180 seconds. If you do not complete Wi-Fi configuration within this period of time, the device automatically reconnects to the original Wi-Fi network.

 
## \* RESET Button

### Restore to factory settings:

Use the pin to press and hold the RESET button for 10 seconds until the indicator becomes fast-flashing blue again, then release the button. The device will be restored to factory settings.


## Get the EZVIZ App

1. Connect your mobile phone to Wi-Fi (suggested).
2. Download and install the EZVIZ app by searching for "EZVIZ" in the App Store or Google Play™.
3. Launch the app and register an EZVIZ user account.

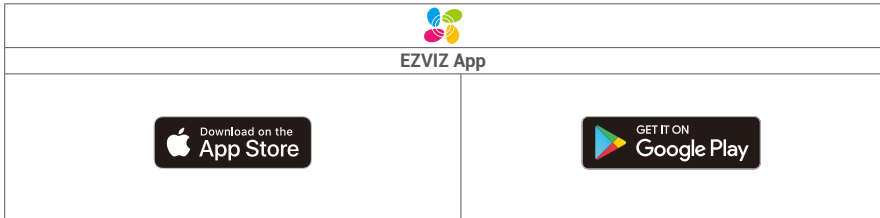

- i** If you have already used the app, please make sure that it is the latest version. To find out if an update is available, go to the app store and search for "EZVIZ".

## Basic Wiring Diagram

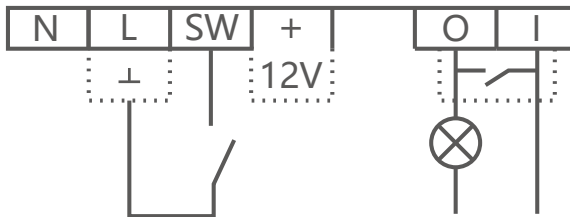 

| Terminals |                                | Cables |                              |
|-----------|--------------------------------|--------|------------------------------|
| N         | Neutral Terminal               | N      | Neutral Cable                |
| L         | Live (100 - 240 V AC) Terminal | L      | Live (100 - 240 V AC) Cables |
| +12V      | 12 V DC Positive Terminal      | +12V   | 12 V DC Positive Cables      |
| ⊥         | Ground (12 V DC) Terminal      | GND    | 12 V DC Ground Cables        |
| SW        | Switch Input Terminal          |        |                              |
| O         | Load Circuit Output Terminal   |        |                              |
| I         | Load Circuit Input Terminal    |        |                              |

# Add Device

## 1. Add Wi-Fi Relay

1. Log in to your account through EZVIZ app, tap the device adding icon and then the QR code scanning page will be displayed.
2. Scan the QR code on the back of the device or on the cover of the Quick Start Guide.



 
3. Add the device by following the wizard on the app.

**i** After adding successfully, the LED indicator of the device will be solid blue.

## 2. Set Up Matter

- i** • To set up Matter, the Wi-Fi relay and your mobile phone must be connected to the same Wi-Fi network.
- Please keep the code for further reference.

1. After the Wi-Fi relay has been added to EZVIZ app, open the app that supports Matter.
2. According to the instructions on the app, scan the Matter Setup Code or enter the numeric setup code on the cover of the Matter Setup Instruction or on the back of the Wi-Fi relay.

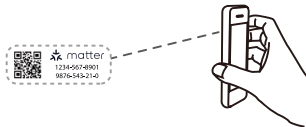

3. Follow the wizard to add your Wi-Fi relay to the app.
4. After the setup is completed, the Wi-Fi relay will be listed in your app.

# Device Installation

 


- Before installation, make sure that there is no damage to the cable insulation.
- Please make sure that the installation should be performed by a qualified electrician.
- Every change in the connections has to be done after ensuring there is no voltage present at the device terminals!
- The device may be connected to and may control electric circuits and appliances only if they comply with the respective standards and safety norms!
- Do not connect the device to appliances exceeding the given max load!
- Connect the device only in the way shown in these instructions. Any other method could cause damage and/or injury!
- Do not attempt to service or repair the device yourself!

## 1. Cut the Power Off


Before mounting the device, turn the circuit breakers off, and use a phase tester or multimeter to check whether there is no voltage on their terminals.

- ① Mount and wire the device only after confirming no voltage is present.

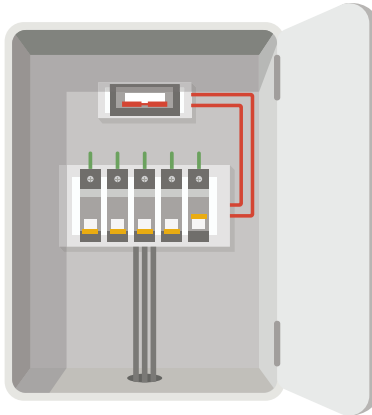


## 2. Connect the Cables

 Please connect the cables to device based on the power supply you use.

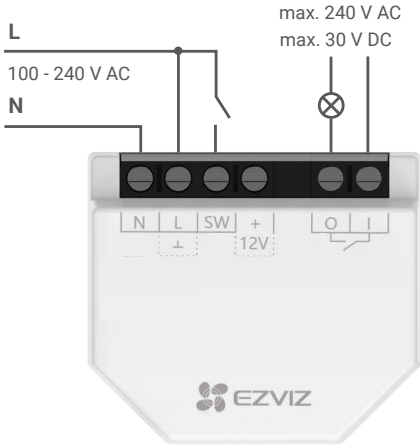

 1. If you are using AC power supply for the device, connect the Live cable to the L terminal, and the Neutral cable to the N terminal.
2. Connect a switch/button to the SW terminal and the Live cable.
3. Connect the load circuit to the O and I terminals.

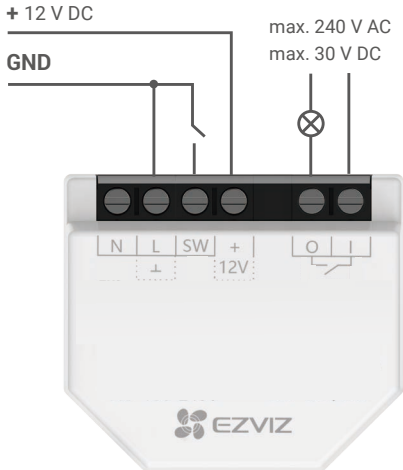

1. If you are using stabilized 12 V DC power supply, connect the + cable to the +12V terminal, and the GND cable to the ⊥ terminal.
2. Connect a switch/button to the SW terminal and the GND cable.
3. Connect the load circuit to the O and I terminals.

### 3. Install the Device

After the wiring is finished, install the device behind the switch or button as shown in the following figure, and then use a screwdriver to tighten the switch or button, and the installation is completed.

 




# Operations on the EZVIZ App


**i** The app interface may be different due to version update.


## 1. Wi-Fi Relay Page

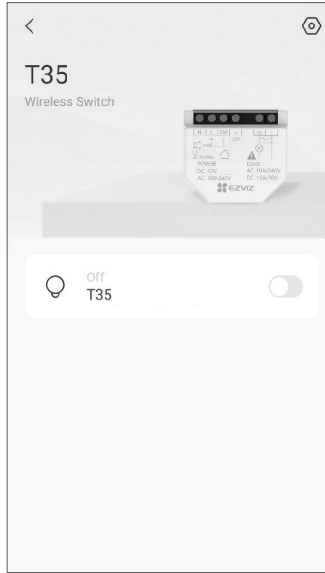When you launch the EZVIZ app, you can manage your device as needed.



| Icon   | Description  |
|--|--|
|    | Settings. View or change the device settings.            |
|  | Switch Page. Tap to enter detailed page for your device. |

You can tap the  icon to configure the following parameters.

| Parameter/Icon   | Description  |
|--|--|
| Name   | Customize the name of your device.   |
| The Matter Ecology   | View the device's Matter code and the Matter ecology to which the device has been added. |
| Network Settings   | View the Wi-Fi network to which your device is connected.                                |
| Device Information   | You can see the device information here.   |
| Delete   | Tap to delete the device from EZVIZ app.   |
|  | Tap this icon in the upper-right corner to view device log.                              |

## 2. Switch Page



| Icon | Description                                    |
|------|--|
|      | Share. Share your device with anyone you want. |
|      | Settings. View or change the device settings.  |
|      | Switch. Tap to open/close the light.           |
|      | Timer. Tap to set a scheduled plan.            |

You can tap the icon to configure the following parameters.

| Parameter                   | Description   |
|-----------------------------|---|
| Device Name                 | Customize the name of your device.                                  |
| Reverse Delay-action Switch | The device will be reversed automatically with a little time delay. |
| Device Type Settings        | Set device input type and related parameters.                       |
| Intelligent Linkage         | Create the intelligent linkage of your devices.                     |
| Device Information          | You can see the device information here.                            |
| Share Device                | You can share the device to your family members or guests.          |

# EZVIZ Connect

## 1. Use Amazon Alexa

These instructions will enable you to control your EZVIZ devices with Amazon Alexa. If you run into any difficulties during the process, please refer to **Troubleshooting**.

### Before you start, make sure that:

1. EZVIZ devices are connected to the EZVIZ app.
2. You have an Alexa-enabled device (i.e. Echo Spot, Echo-Show, All-new Echo-Show, Fire TV (all generations), Fire TV stick (second generation only), or Fire TV Edition smart TVs).
3. The Amazon Alexa app is already installed on your smart device, and you have created an account.

### To Control EZVIZ devices with Amazon Alexa:

1. Open the Alexa app and select "Skills and Games" from the menu.
2. On the Skills and Games screen, search for "EZVIZ", and you will find "EZVIZ" skills.
3. Select your EZVIZ device's skill, then tap **ENABLE TO USE**.
4. Enter your EZVIZ username and password, and tap **Sign in**.
5. Tap the **Authorize** button to authorize Alexa to access your EZVIZ account, so that Alexa can control your EZVIZ devices.
6. You will see "EZVIZ has been successfully linked", then tap **DISCOVER DEVICES** to allow Alexa to discover all your EZVIZ devices.
7. Go back to Alexa app menu and select "Devices", and under devices you will see all your EZVIZ devices.

### Voice Command

Discover a new smart device via the "Smart Home" menu in the Alexa app or the Alexa Voice Control function.

Once the device is found, you can control it with your voice. Speak simple commands to Alexa.

- ① Your device's name for example: "show xxxx device," can be changed in the EZVIZ app. Each time you change the name of the device, you will need to discover the device again to update the name.

### Troubleshooting

#### What should I do if Alexa fails to discover my device?

Check if there are any Internet connecting problems.

Try to restart the smart device and re-discover the device on Alexa.

#### Why the device's status is "Offline" on Alexa?

Your device might have been disconnected from the network. Restart the smart device and re-discover on Alexa.

Check if your router is connected to the Internet and try again.

- ① For details about countries where Amazon Alexa is available, see Amazon Alexa's official website.

## 2. Use Google Assistant

With the Google Assistant, you can activate your EZVIZ device and watch live by speaking Google Assistant voice commands.

### **The following devices and apps are required:**

1. A functional EZVIZ app.
2. A TV with functional Chromecast connecting to it.
3. The Google Assistant app on your phone.

### **To get started, follow the steps below:**

1. Set up the EZVIZ device and make sure it works properly on the app.
2. Download the Google Home app from the App Store or Google Play™ and log into your Google account.
3. On the My home screen, tap "+" in the upper-left corner, and select "Set up device" from the menu list to go to the Set up page.
4. Tap **Works with Google**, and search for "EZVIZ", where you will find "EZVIZ" skills.
5. Enter your EZVIZ username and password, and tap **Sign in**.
6. Tap the **Authorize** button to authorize Google to access your EZVIZ account, so that Google can control your EZVIZ devices.
7. Tap **Return to app**.
8. Follow the above steps to complete the authorization. When synchronization is completed, EZVIZ service will be listed under your list of services. To see a list of compatible devices under your EZVIZ account, tap on the EZVIZ service icon.
9. Now try some commands. Use the name of the device that you created when you set up the system.

Users can manage devices as a single entity or in a group. Adding devices to a room allows users to control a group of devices at the same time using one command.

See the link for more information:

<https://support.google.com/googlehome/answer/7029485?co=GENIE.Platform%3DAndroid&hl=en>

## Specification

| Parameter              | Description                      |
|------------------------|----------------------------------|
| Product Size (H*W*D)   | 43.8 ×38.5 ×18.5mm               |
| Power Supply           | 100-240 V AC, 50/60 Hz or 12V DC |
| Electrical Consumption | <1.5W                            |
| Working Temperature    | -10 °C - 45 °C                   |
| Controlling Elements   | 16A relay                        |
| Max Switching Voltage  | 250V AC or 30V DC                |
| Radio Protocol         | IEEE 802.11b/g/n/ax              |

## Information for Private Households

1. Separate collection of waste equipment: Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of waste equipment must dispose of it separately from unsorted municipal waste. In particular, waste equipment does not belong in household waste, but in special collection and return systems.
2. Batteries and rechargeable batteries as well as lamps: Owners of waste equipment shall, as a rule, separate waste batteries and rechargeable batteries that are not enclosed in the waste equipment, which can be removed from the waste equipment without being destroyed, from the waste equipment before handing them in at a collection point. This does not apply if waste equipment is prepared for reuse with the participation of a public waste management authority.
3. Options for returning waste equipment: Owners of waste equipment from private households can return it free of charge to the collection points of the public waste management authorities or to the take-back points set up by manufacturers or distributors within the meaning of the Electrical and Electronics Equipment Law. Stores with a sales area of at least 400 m<sup>2</sup> for electrical and electronic equipment and those grocery stores with a total sales area of at least 800 m<sup>2</sup> that offer electrical and electronic equipment several times a year or on a permanent basis and make it available in the market are required to take it back. This also applies in the case of distribution using means of distance communication, if the storage and shipping areas for electrical and electronic equipment are at least 400 m<sup>2</sup> or the total storage and shipping areas are at least 800 m<sup>2</sup>. Distributors shall, in principle, ensure take-back by providing suitable return facilities at a reasonable distance from the respective end user. The possibility of returning waste equipment free of charge exists for distributors who are obliged to take it back, among other things, if a new similar device that essentially fulfills the same functions is delivered to an end user.
4. Privacy Notice: Waste equipment often contains sensitive personal data. This applies in particular to devices of information and telecommunications technology such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the waste equipment to be disposed of.
5. Meaning of the symbol “crossed-out wheelie bin”: The symbol of a crossed-out wheelie bin regularly depicted on electrical and electronic equipment indicates that the respective device is to be collected separately from unsorted municipal waste at the end of its service life.