

COPYRIGHT © Hangzhou EZVIZ Software Co., Ltd.. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou EZVIZ Software Co., Ltd. (hereinafter referred to as "EZVIZ"). This user manual (hereinafter referred to as "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.



About this Manual

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the **EZVIZ™** website (<http://www.ezvizlife.com>).

Revision Record

New release – January, 2019

Trademarks Acknowledgement

 **EZVIZ™**,  **™**, and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

 
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT.

EZVIZ DOES NOT UNDERTAKE ANY LIABILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE AS THE RESULT OF PRODUCT INTERRUPTION OR SERVICE TERMINATION CAUSED BY: A) IMPROPER INSTALLATION OR USAGE OTHER THAN AS REQUESTED; B) THE PROTECTION OF NATIONAL OR PUBLIC INTERESTS; C) FORCE MAJEURE; D) YOURSELF OR THE THIRD PARTY, INCLUDING WITHOUT LIMITATION, USING ANY THIRD PARTY'S PRODUCTS, SOFTWARE, APPLICATIONS, AND AMONG OTHERS.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS AND DATA PROTECTION LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Pakkens innhold



Kamera (x1)



Monteringsmal (x1)




Skruesett (x1)



Hurtigstartveiledning (x1)

Grunnleggende funksjoner

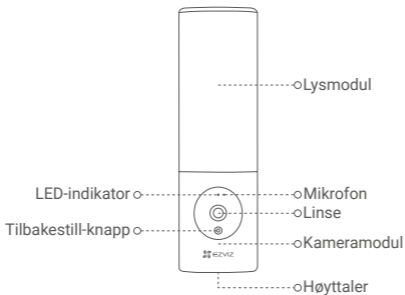


Navn	Beskrivelse
LED-indikator	<ul style="list-style-type: none">• Rød – fast: Kameraet starter opp.• Blinker sakte rødt: Wi-Fi-tilkobling mislyktes.• Blinker raskt rødt: Kameraunntak (f.eks. feil på minnekort).• Blå – fast: Direktvist video vises i EZVIZ-appen.• Blinker sakte blått: Kameraet fungerer normalt.• Blinker raskt blått: Kameraet er klart for Wi-Fi-tilkobling.
Linse	Linsen kan justeres 15 grader nedover.
Kameramodul	Kameramodulen kan roteres 10 grader til venstre og høyre.
Tilbakestill-knapp	Hold inne i fire sekunder for å omstarte og tilbakestille alle parametere til standardinnstillingene.

Installasjon

- Anbefalt monteringshøyde: 1,8–2,2 m over bakken.
- Kameraet har et innebygget minnekort for lagring av videoer. Det er ikke nødvendig å installere et ekstra SD-kort.


1. Slå av strømmen ved strømbryteren.

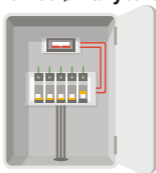

- Hvis du ikke vet hvor sikringsboksen din er eller hvordan du slår av strømmen, må du kontakte en elektriker.
- Hold sikringen av under hele installasjonsprosessen.


2. Løsne monteringssockelen fra kameraet.

Skru løs sokkelskruen med skrutrekkeren (følger ikke med i pakken), og trekk monteringssockelen løs fra kameraet.

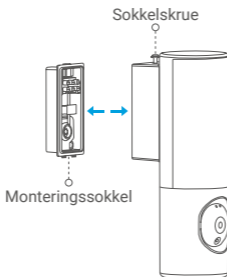


3. Installer monteringssockelen.

- Plasser boremalen på overflaten der du ønsker å montere sokkelen.
- (Kun for vegger av betong) Bor skru hull i henhold til malen og sett inn veggankerne.
- Før ledningene fra veggen gjennom boremalen og gummien på monteringssockelen.
- Fest monteringssockelen med skruer.

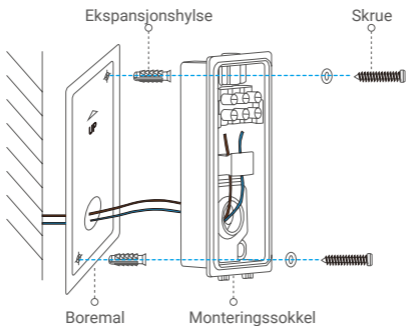


4. Koble til kablene.

- Koble til den nøytrale ledningen (N), jordingskabelen (GN) og spenningsledningen (L) én etter én.
- Fest dem med en skrutrekker.

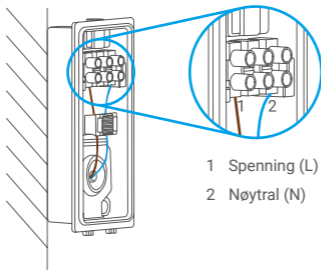


5. Sett på plass kameraet på monteringssokkelen.

- Vipp bunnen av monteringssokkelen inn i kameraet.
- Trykk monteringssokkelen og kameraet sammen.
- Stram sokkelskruen på oversiden av kameraet.

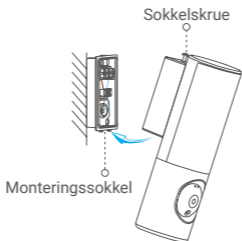


6. Juster vinkelen til kameramodulen.

Du kan justere den horisontale og vertikale vinkelen til kameramodulen etter ønske.

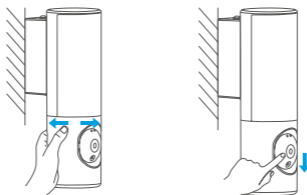


7. Koble inn sikringen igjen.

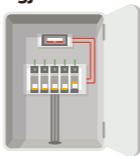

8. Kontroller at kameraet har strømtilførsel.

Når strømmen er gjenopprettet, er kameraet klart for oppsettet når lyset tennes og LED-indikatoren på forsiden av kameraet blinker raskt i blått.

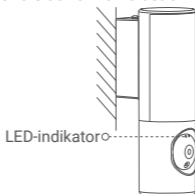


Oppsett

1. Skaff EZVIZ-appen


- Koble mobiltelefonen til et Wi-Fi-nettverk.
- Last ned og installer EZVIZ-appen ved å søke etter «EZVIZ» i App Store eller Google Play Store™.
- Start appen og registrer en EZVIZ-brukerkonto.

2. Legg til kamera i EZVIZ

 - Logg inn på brukerkontoen din på EZVIZ-appen.
Fra startsidene trykker du på «+» i øverste høyre hjørne for å gå til siden for skanning av QR-koden.



- Skann QR-koden på omslaget til hurtigstartguiden eller på selve kameraet.

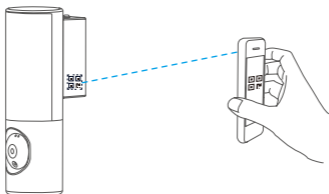

- Følg hjelpeprogrammet til EZVIZ-appen for å fullføre Wi-Fi-konfigurasjonen.

 Hvis du vil endre kameraets Wi-Fi, må du holde inne tilbakestillingsknappen i fire sekunder og gjenta trinnene ovenfor.

EKSPONERING FOR RADIOFREKVENT STRÅLING

For denne radioenheten gjelder følgende frekvensbånd og nominelle verdier for utstrålt effekt (utstrålt og ledet):

Bånd	Wi-Fi 2,4 GHz
Frekvens	Fra 2,4 GHz til 2,4835 GHz
Utstrålt effekt (EIRP)	100 mW

 Besøk www.ezviz.eu for å få detaljert informasjon.