

COPYRIGHT © Hangzhou EZVIZ Software Co., Ltd.. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou EZVIZ Software Co., Ltd. (hereinafter referred to as “EZVIZ”). This user manual (hereinafter referred to as “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.


### **About this Manual**

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the EZVIZ™ website (<http://www.ezvizlife.com>).

### **Revision Record**

New release – September, 2021

### **Trademarks Acknowledgement**

EZVIZ™, ™, and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

### **Legal Disclaimer**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT.

EZVIZ DOES NOT UNDERTAKE ANY LIABILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE AS THE RESULT OF PRODUCT INTERRUPTION OR SERVICE TERMINATION CAUSED BY: A) IMPROPER INSTALLATION OR USAGE OTHER THAN AS REQUESTED; B) THE PROTECTION OF NATIONAL OR PUBLIC INTERESTS; C) FORCE MAJEURE; D) YOURSELF OR THE THIRD PARTY, INCLUDING WITHOUT LIMITATION, USING ANY THIRD PARTY'S PRODUCTS, SOFTWARE, APPLICATIONS, AND AMONG OTHERS.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS AND DATA PROTECTION LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.


IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATTER PREVAILS.

# Obsah

<b>Přehled</b> .....	<b>1</b>
1. Obsah balení .....	1
2. Základy .....	1
<b>Technické údaje</b> .....	<b>2</b>
<b>Indikátor kvality vzduchu</b> .....	<b>2</b>
<b>Ovládací panel</b> .....	<b>2</b>
<b>Montáž</b> .....	<b>3</b>
<b>Řešení potíží</b> .....	<b>4</b>

# Přehled

## 1. Obsah balení

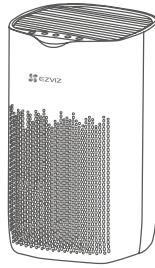

Čistička vzduchu (1x)





Stručná příručka (1x)



Právní informace (1x)

## 2. Základy

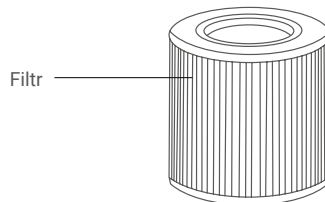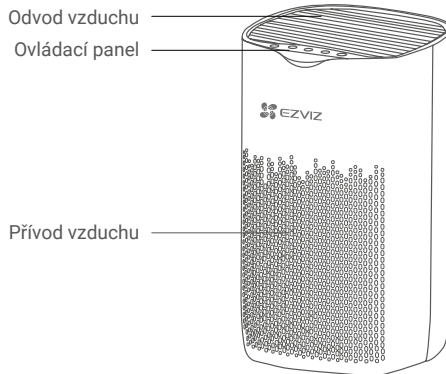

# Technické údaje

Popis	Čistička vzduchu
Model	CS-EB250A
Rychlost přívodu čistého vzduchu pro kouř	250 m <sup>3</sup> /h
Napětí	220–240 V~, 50 Hz; 220–230 V~, 60 Hz
Jmenovitý výkon	45 W; 63 W
Hrubá/čistá hmotnost	4,3/3,4 kg
Rozměry	238 × 238 × 409 mm


## Indikátor kvality vzduchu



Zelená



Žlutá

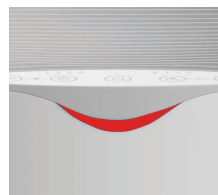

Červená














## Indikace jemných částic (PM2,5)

Kvalita vzduchu	Barevná indikace
Good	Zelená
Poor	Žlutá
Kriticky špatná	Červená

## Ovládací panel




Ikona	Popis
	Zapnutí/vypnutí


	Klepnutím na tlačítko rychlosti ventilátoru vyberte požadovanou provozní rychlost. Režim spánku: provoz s nízkou hlučností, ideální pro spánek 1: provoz s nízkou rychlostí 2: provoz se střední rychlostí 3: provoz s vysokou rychlostí
	Klepnete-li na tlačítko automatického režimu, bude spotřebič automaticky přizpůsobovat rychlost ventilátoru podle kvality vzduchu v místnosti.
	Klepnutím na tlačítko časovače nastavíte plánované vypnutí spotřebiče – spotřebič se po zadané době automaticky vypne. 1: Při výběru této možnosti se spotřebič automaticky vypne za 1 hodinu. 2: Při výběru této možnosti se spotřebič automaticky vypne za 2 hodiny. 4: Při výběru této možnosti se spotřebič automaticky vypne za 4 hodiny. 8: Při výběru této možnosti se spotřebič automaticky vypne za 8 hodin.
	Slouží k zapnutí a vypnutí ionizátoru.
  	Jakmile filtr dosáhne konce své doporučené životnosti, bude blikat tlačítko  a indikovat tak, že je nutné co nejdříve vyměnit filtr. Po výměně filtru stisknutím tlačítek  a jejich podržením po dobu 5 sekund resetujete časovač filtru. Po úspěšném resetování časovače filtru zazní dlouhé pípnutí.
  	Stisknutím tlačítek  a jejich podržením po dobu 5 sekund povolíte/zakážete funkci dětského zámku.

## Montáž

1. Uchopte otočný kryt na spodní části výrobku. Jeho otáčením proti směru hodinových ručiček ve směru zámku poté vyjměte filtr. Vyjměte filtrační sáček a vložte část zpět do spotřebiče.

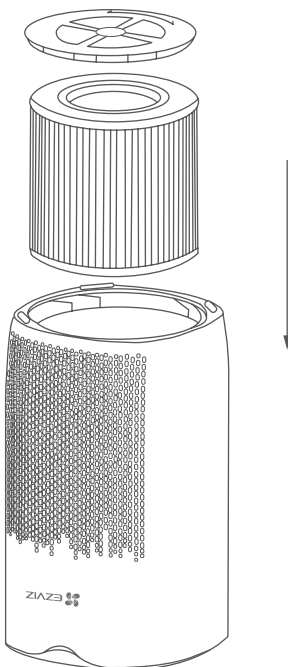

2. Jakmile je filtr umístěn ve spotřebiči, vyrovnejte trojúhelníkový tvar spodního krytu s trojúhelníkem na spotřebiči a otáčením ve směru hodinových ručiček jej utáhněte.

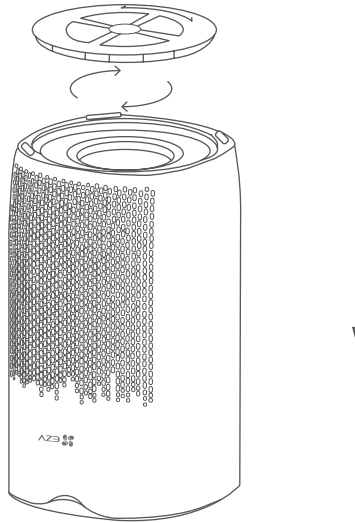

## Řešení potíží

Problém	Pravděpodobná příčina	Řešení
Spotřebič se nedaří zapnout.	Napájecí kabel není pevně připojen do zásuvky.	Zapojte spotřebič pevně.
	Přední kryt není zajištěný.	Zajistěte, aby byl přední kryt pevně uzavřený.
Při provozu se ozývá abnormální zvuk a průtok vzduchu je nízký.	Zkontrolujte, zda je vyjmut filtrační sáček PE.	Vyjměte filtrační sáček PE.
	Zkontrolujte, zda není blokován přívod a odvod vzduchu.	Vypněte spotřebič a odstraňte překážející předměty.
Je cítit divný zápach.	Spotřebič je čerstvě sestaven.	Zápach brzy zmizí.
	Někdo kouří.	Zápach po chvíli zmizí.
	Filtr absorboval příliš mnoho dýmu.	Vyčistěte nebo vyměňte filtry.
	Je čas vyměnit filtry.	