

COPYRIGHT © Hangzhou EZVIZ Software Co., Ltd.. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou EZVIZ Software Co., Ltd. (hereinafter referred to as "EZVIZ"). This user manual (hereinafter referred to as "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.



### **About this Manual**

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the **EZVIZ™** website (<http://www.ezvizlife.com>).

### **Revision Record**

New release – January, 2019

### **Trademarks Acknowledgement**

 **EZVIZ™**,  **™**, and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

### **Legal Disclaimer**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.


TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT.

EZVIZ DOES NOT UNDERTAKE ANY LIABILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE AS THE RESULT OF PRODUCT INTERRUPTION OR SERVICE TERMINATION CAUSED BY: A) IMPROPER INSTALLATION OR USAGE OTHER THAN AS REQUESTED; B) THE PROTECTION OF NATIONAL OR PUBLIC INTERESTS; C) FORCE MAJEURE; D) YOURSELF OR THE THIRD PARTY, INCLUDING WITHOUT LIMITATION, USING ANY THIRD PARTY'S PRODUCTS, SOFTWARE, APPLICATIONS, AND AMONG OTHERS.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS AND DATA PROTECTION LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATTER PREVAILS.

# Inhoud van de verpakking



Camera (x1)



Boorsjabloon (x1)




Set schroeven (x1)



Snelstartgids (x1)

## Basis

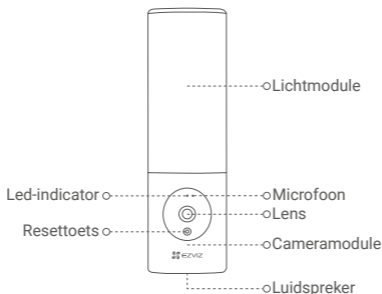

### Naam

Led-indicator

### Omschrijving

- Constant rood: Camera wordt opgestart.
- Knippert langzaam rood: Wifi-verbinding mislukt.
- Knippert snel rood: Camera-uitzondering (bijv. fout geheugenkaart).
- Constant blauw: Video wordt live weergegeven in de EZVIZ-app.
- Knippert langzaam blauw: Camera werkt correct.
- Knippert snel blauw: Camera gereed voor wifi-verbinding.

Lens

De lens kan 15 graden omlaag worden aangepast.

Cameramodule

De cameramodule kan 10 graden naar links en rechts worden gedraaid.


Resettoets

Houd 4 seconden ingedrukt om opnieuw op te starten en stel alle parameters opnieuw in naar standaard.

# Installatie

- i** • Aanbevolen installatiehoogte: 6-7 ft (1.8-2.2 m) boven de grond.
- De camera heeft een ingebouwde geheugenkaart voor video-opslag. Het is niet nodig een extra SD-kaart te installeren.


## 1. Sluit de elektriciteit af bij de stroomonderbreker.

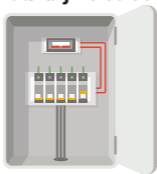

- i** • Als u niet weet waar uw schakelaar is, of hoe u de elektriciteit kunt uitschakelen, neem dan contact op met een gecertificeerde elektricien.
- Laat de stroomonderbreker uit tijdens het installatieproces.


## 2. Haal de montagevoet van de camera.

Schroef de schroef van de basis los met een schroevendraaier (niet meegeleverd) en trek de montagevoet van de camera.

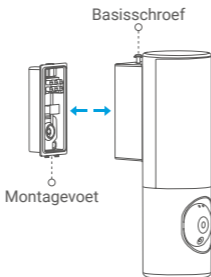


## 3. Installeer de montagevoet.

- Plaats een boorsjabloon op het oppervlak waar u de voet wilt plaatsen.
- **(Alleen voor cement)** Boor de schroefgaten volgens de sjabloon en plaats de bevestigingen.
- Haal de kabels uit de muur door de boorsjabloon en het rubber van de montagevoet.
- Gebruik schroeven om de montagevoet te bevestigen.

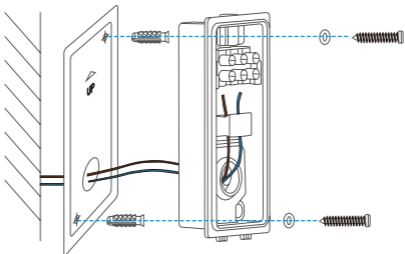


#### 4. Sluit de kabels aan.

- Verbind de nuldraad (N) en fasedraad (L) een voor een.
- Bevestig ze met een schroevendraaier.

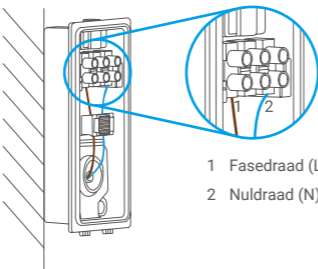


#### 5. Plaats de camera op de montagevoet.

- Gesp de onderkant van de montagevoet in de camera.
- Druk de montagevoet en de camera samen.
- Draai de basisschroef op de bovenkant van de camera aan.

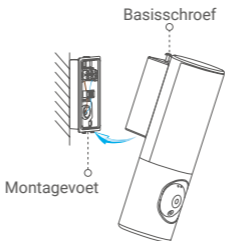


## 6. Pas de hoek van de cameramodule aan.

U kunt de horizontale en verticale hoek van de cameramodule naar wens aanpassen.

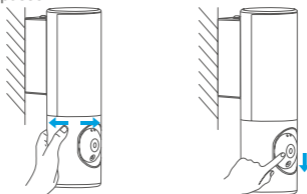


## 7. Schakel de stroomonderbreker weer in.

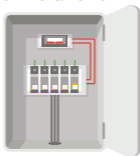

## 8. Controleer of de camera stroom heeft.

Na het inschakelen van de stroom, is de camera klaar voor installatie wanneer het lampje brandt en de led-indicator op de voorkant van de camera blauw knippert.

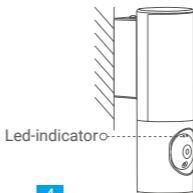


# Instellen

## 1. De EZVIZ-app downloaden


- Verbind uw mobiele telefoon met de Wi-Fi.
- Download en installeer de EZVIZ-app door naar 'EZVIZ' te zoeken in de App Store of de Google Play Store™.
- Start de app en maak een EZVIZ-gebruikersaccount aan.

## 2. De camera toevoegen aan EZVIZ


- Log in op uw account met behulp van de EZVIZ-app.  
Tik in het hoofdscherm op "+" in de rechterbovenhoek om de QR-code te openen.



- Scan de QR-code op de omslag van de snelstartgids of op de behuizing van de camera.

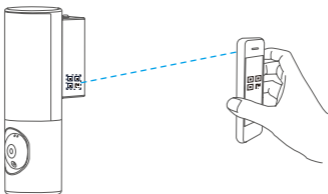

- Volg de assistent van de EZVIZ-app om de wifi-configuratie te voltooien.

-  Als u de wifi van uw camera wilt wijzigen, drukt u op 4 seconden op de resetknop en herhaalt u de bovenstaande stappen.

## BLOOTSTELLING AAN RADIOFREQUENTIE

De frequentiebanden en de nominale limieten van het op dit radiotoestel toepasselijke geëmitteerde vermogen (uitgestraald en/of geleid) zijn de volgende:

Band	Wifi 2,4 GHz
Frequentie	Van 2,4 GHz tot 2,4835 GHz
Vermogenstransmissie (EIRP)	100 mW

-  Voor meer informatie, gaat u naar [www.ezviz.eu](http://www.ezviz.eu).